



NO.	HHAW PARTS NO.	Q' TY/UNIT	PARTS NAME
1	HWRAC-18WEA A01	1	BASE
2	HWRAC-10EH4 A01	1	COMPRESSOR
3	HWRAC-25YH4 A03	3	COMPRESSOR RUBBER
4	RAC-25EVX 003	3	PUSH NUT
5	HWRAC-10EH4 A02	1	CONDENSER
6	HWRAC-10EH4 A03	1	REVERSING VALVE (WITH COIL)
7	HWRAC-SX10HAK A07	1	2S-VALVE
8	HWRAC-SX10HAK A08	1	3S-VALVE
9	HWRAC-10EH4 A04	1	SOUND PROOF COVER ASS' Y
10	HWRAC-E10H2 A07	1	O. L. R COVER
11	HWRAC-10EH4 A05	1	SOUND PROOF COVER ASS' Y
12	HWRAC-E10H2 A08	1	CONNECTING CORD (COMP)
13	HWRAC-E10H2 A09	1	THERMISTOR (DEFROST)
14	HWRAC-D10EX A08	1	THERMISTOR SUPPORT
15	HWRAC-25YH4 A14	1	ELECTRIC EXPAN. VALVE
16	RAC-25BVY 002	1	COIL (EXPAN. VALVE)
17	HWRAC-25WEA A01	1	PARTITION
18	HWRAC-E10H2 A11	1	REACTOR COVER
19	HWRAC-25EVZ 006	1	REACTOR 1
20	HWRAC-E10H2 A14	1	FAN MOTOR SUPPORT
21	HWRAC-50NX2 A23	1	FAN MOTOR
22	HWRAC-25YH4 A23	1	PROPELLER FAN
23	HWRAC-25YH4 A24	1	NUT (PROPELLER. FAN)
24	HWRAC-E10H2 A16	1	SIDE COVER (L)
25	HWRAC-10EH4 A08	1	FRONT COVER
26	RAC-E10CYK 005	1	DISCHARGE GRILL
27	HWRAC-10EH4 A09	1	ELECTRIC PARTS PLATE
28	HWRAC-10EH4 A10	1	ELECTRIC PARTS COVER
29	HWRAC-25WEA A02	1	TERMINAL PLATE
30	HWRAC-25YH4 A32	2	TERMINAL BOARD (2P)
31	HWRAC-25WEA A03	1	HEAT SINK (REGURATOR 1)
32	HWRAC-E08H A11	1	FUSE (15A)
33	HWRAC-25YHA3 A10	1	FUSE (3. 15A)
34	WRAC-25YHA3 A11	1	VARISTOR
35	HWRAC-18WEA A01	1	P. W. B. (MAIN)
36	HWRAC-25YHA3 A13	1	FUSE (2A)
37	HWRAC-E10H2 A24	1	SUPPORT (P. W. B. )
38	HWRAC-25YHA3 A15	1	CAPACITOR
39	HWRAC-10EH4 A13	1	COVER (OUT DOOR THERMISTOR)
40	HWRAC-D10EX A17	1	THERMISTOR (OUT DOOR TEMP. )
41	HWRAC-E10H2 A25	1	SIDE COVER (R)
42	HWRAC-E10H2 A26	1	TERMINAL COVER
43	HWRAC-10EH4 A14	1	TOP COVER
44	HWRAC-X10HAK A04	1	SERVICE VALVE COVER
45	HWRAC-25YH4 A50	1	DRAIN PIPE
46	HWRAC-10EH4 A15	1	SOUND PROOF COVER ASS' Y
47	HWRAC-10EH4 A16	1	SOUND PROOF COVER ASS' Y
48	HWRAC-10EH4 A17	1	SOUND PROOF COVER ASS' Y
49	HWRAC-25WEA A05	1	REACTOR 2