



NO	JCH-WH PARTS NO		Q' TY/ UNIT	PARTS NAME
	RAC-42WPE	RAC-50WPE		
1	HWRAC-50WPC A01		1	BASE
2	HWRAC-50WED A01		1	COMPRESSOR
3	HWRAC-50NX2 A04		3	PUSH NUT
4	HWRAC-50WEC A01		1	CONDENSER
5	HWRAC-42WPD A01		1	REVERSING VALVE
6	HWRAC-50WEA A05		1	SERVICE VALVE
7	HWRAC-50WEA A06		1	SERVICE VALVE
8	HWRAC-50WED A03		1	ELECTRIC EXPANSION VALVE
9	HWRAC-50WED A04		1	SOUND PROOF
10	HWRAC-50WPC A04		1	SOUND PROOF
11	HWRAC-50WEC A07		2	SOUND PROOF
12	HWRAC-42WPD A02		1	SOUND PROOF
13	HWRAC-25WXD A08		1	O. L. R COVER
14	HWRAC-50WEA A12		1	CONNECTING CORD (COMP)
15	HWRAC-50NX2 A16		1	THERMISTOR (DEFROST)
16	HWRAC-50NX2 A17		1	THERMISTOR SUPPORT
17	HWRAC-25WXD A09		1	COIL (REVERSING VALVE)
18	HWRAC-50WED A07		1	COIL (EXPANSION VALVE)
19	HWRAC-50WED A08		1	PARTITION
20	HWRAC-50WED A09		1	REACTOR
21	HWRAC-50WEB A02		1	FAN MOTOR SUPPORT
22	HWRAC-42WPD A03		1	FAN MOTOR
23	HWRAC-50WEC A12		1	PROPELLER FAN
24	HWRAC-50NX2 A25		1	NUT (PROPELLER FAN)
25	HWRAC-50NX2 A26		1	SIDE COVER (L)
26	HWRAC-50NX2 A27		1	HANDLE
27	HWRAC-50WED A11		1	FRONT COVER
28	HWRAC-50WEC A14		1	DISCHARGE GRILL
29	HWRAC-50WEA A14		1	EARTH-PLATE
30	HWRAC-E14H3 914		1	THERMISTOR (OUTDOOR TEMPERATURE)
31	HWRAC-50WED A12		1	SIDE COVER (R)
32	HWRAC-18WSPA A24		1	TC-COVER
33	HWRAC-50WEC A15		1	H-SHEET
34	HWRAC-50WEC A16		1	TERMINAL COVER
35	HWRAC-SX18HAK A28		1	TOP COVER
36	HWRAC-50WED A13		1	SERVICE VALVE COVER
37	HWRAC-50NX2 A36		1	BUSH ASSEMBLY
38	HWRAC-50NX2 A37		2	BUSH
39	HWRAC-50NX2 A38		1	DRAIN PIPE
40	HWRAC-50WEC A17		1	ELECTRIC PARTS PLATE
41	HWRAC-50WED A14		1	ELECTRIC PARTS COVER
42	HWRAC-50WEB A07		2	SUPPORT2 (P. W. B.)
43	RAC-1F50KVY014		1	HEAT SINK
44	HWRAC-42WPE A01	HWRAC-50WPE A01	1	P. W. B. (MAIN)
45	HWRAC-50WEB A11		2	CORD (REACTOR)
46	HWRAC-50WED A16		1	TERMINAL BOARD (5P)
47	HWRAC-50WED A17		1	FUSE (25A)
48	HWRAC-25WXD A11		2	FUSE (3.15A)
49	HWRAC-50WEB A13		1	SUPPORT1 (P. W. B.)
50	HWRAC-25WXD A04		1	SOUND PROOF