
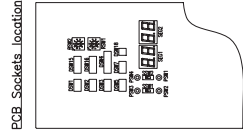
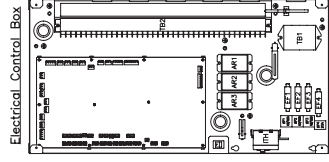


Mark Table

Mark	Part Name
AR12	Relay Heater 2P
AR13	Relay Heater 3P
AN13a3	Anal Connector
EF12a	Fuse (E- Heater)
EF13	Fuse (Heater Tank)
EH12a	Electrical Heater
EH13	Electrical Heater (Tank)
LCD	User Interface LCD (PC-ARF2E)
PW	Water Pressure Sensor
WV12	Micro-Computer Control Exp. Valve
PCB	PCB
PCB1	PCB (Circuit Board)
TH12	Thermostat
TH13	Terminal Board
WP13a	Water Pumps
3WV13a	3-Way Valve for DHW
3WV13b	3-Way Valve for SWP
V13	Mixing Valve for Circuit 2
SW	Switch for E-Heater Manual Mode
THE	Chicon for Heater
TH12a	Inlet Water Thermistor
TH12b	Inlet Heater Thermistor
TH12c	Outlet Water Thermistor
TH12d	Gas Pipe Thermistor
TH12e	DHW Water Thermistor
TH12f	Outlet C2 Water Thermistor
TH12g	Auxiliar Thermistor
TH12h	Water Thermistor
DSW1	Additional Setting (Unit Type)
DSW1a	Capacity Setting
DSW1b	Additional Setting
DSW1c	Terminating Resistance
DSW1d	Setting (U/V)
DSW1e	Relay Address
DSW1f	UL Address
LED12	LEDs Indication
SEC12	Seven Segments Indication
Y12	Relay for Electrical Heater
Y13	Relay for Electrical Heater
Y14	Relay for 3-Way Valve DHWT
Y15	Relay for 3-Way Valve SWP (Output 1)
Y16	Relay for Mixing Valve
Y17	Relay for Water Pump 1
Y18	Relay for Water Pump 2
Y19	Relay for Water Pump 3 (Output 2)
Y20	Relay for Water Pump 3 (Output 1)
Y21	Relay for Output 3 (Solar)
Y22	Relay for Output 4 (Solar)
Y23	Terminals
Y24	Close-end Connector
Y25	Field Supplied
Y26	Field Wiring
Y27	Earth Wiring
Y28	Factory Wiring

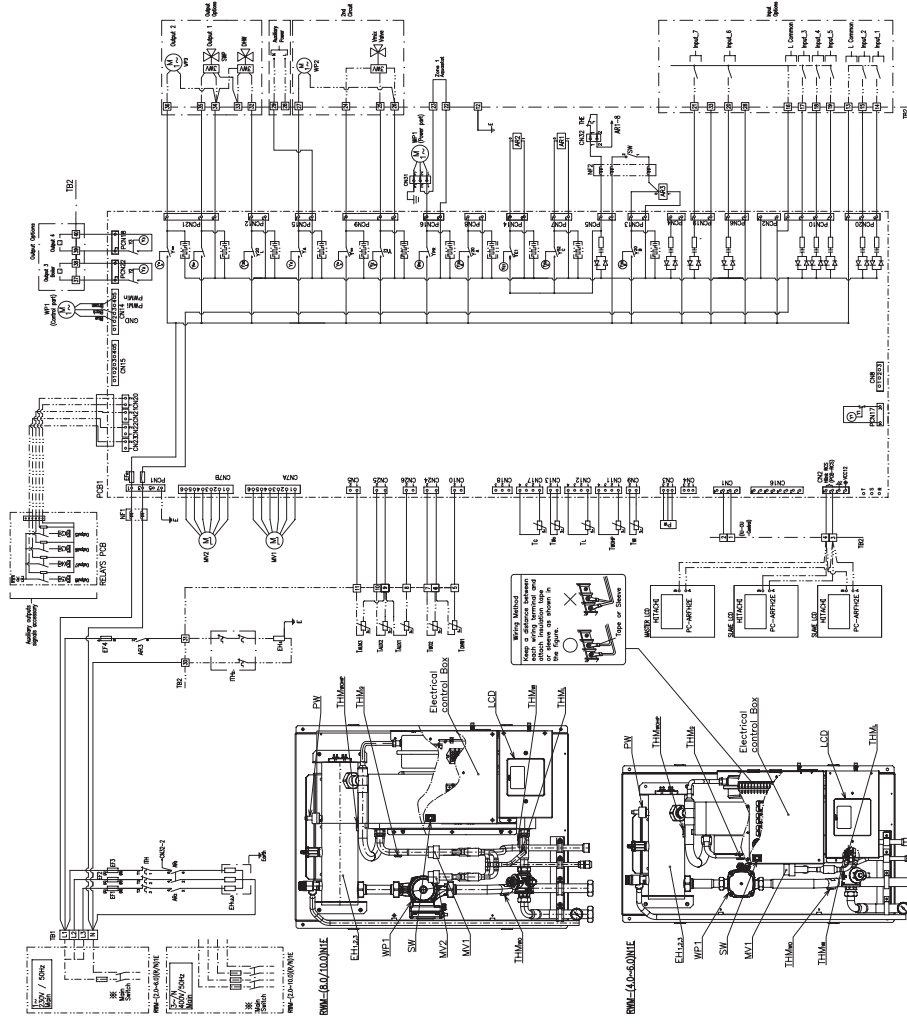

Factory Setting Position of Dip Switch

Model	RWM	DSW1	DSW2	DSW3	DSW4	DSW5&7	DSW6/18	DSW15&16	RSW1	RSW2	SSW1	SSW2
2.0HP												
2.5HP												
3.0HP												
4.0HP												
5.0HP												
6.0HP												
8.0HP												
10.0HP												

The side of the mark indicates the dip switch position.

